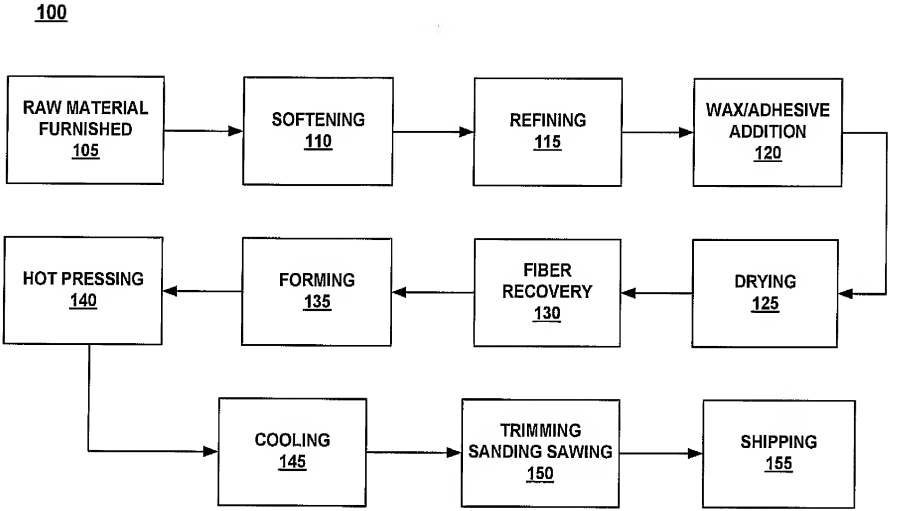
100
RAW MATERIAL FURNISHED 105
SOFTENING 110
REFINING 115
WAX/ADHESIVE ADDITION 120
DRYING 125
FIBER RECOVERY 130
FORMING 135
HOT PRESSING 140
COOLING 145
TRIMMING SANDING SAWING 150
SHIPPING 155

FIGURE 1

200

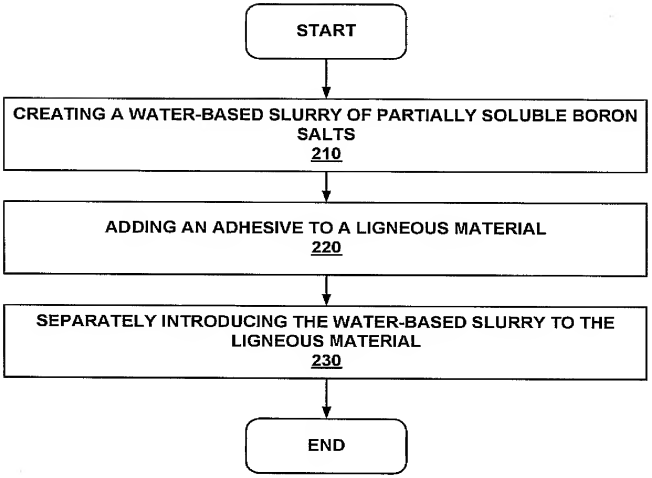
START
CREATING A WATER-BASED SLURRY OF PARTIALLY SOLUBLE BORON SALTS
210
ADDING AN ADHESIVE TO A LIGNEOUS MATERIAL
220
SEPARATELY INTRODUCING THE WATER-BASED SLURRY TO THE LIGNEOUS MATERIAL
230
END

FIGURE 2

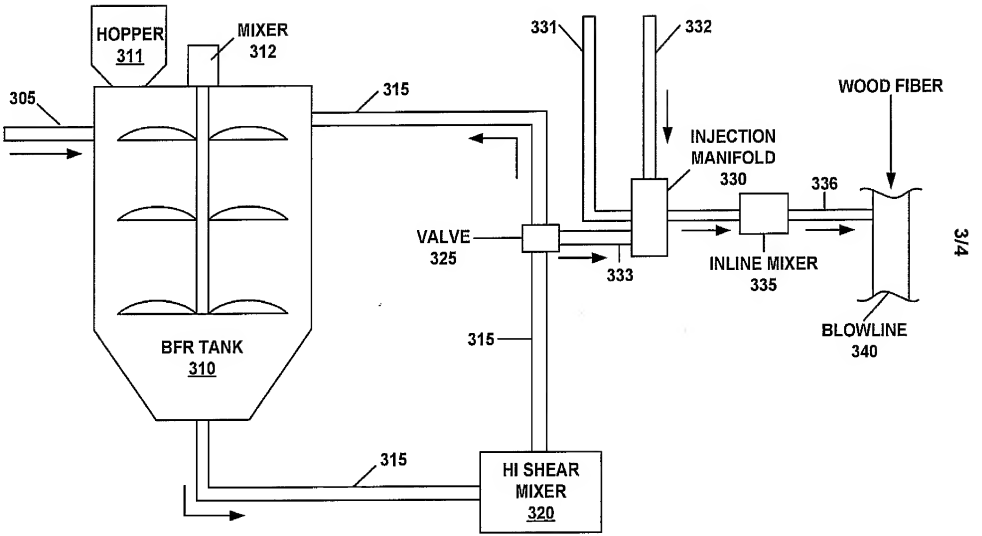
300
HOPPER
311
MIXER
312
305
315
331
332
WOOD FIBER
INJECTION
MANIFOLD
330
336
VALVE
325
333
INLINE MIXER
335
BLOWLINE
340
BFR TANK
310
315
315
HI SHEAR
MIXER
320

FIGURE 3

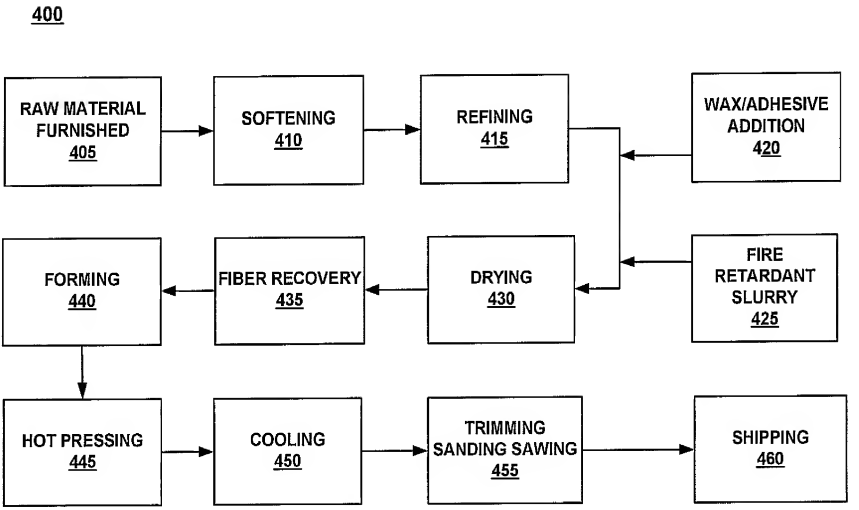
400
RAW MATERIAL FURNISHED 405
SOFTENING 410
REFINING 415
WAX/ADHESIVE ADDITION 420
FORMING 440
FIBER RECOVERY 435
DRYING 430
FIRE RETARDANT SLURRY 425
HOT PRESSING 445
COOLING 450
TRIMMING SANDING SAWING 455
SHIPPING 460

FIGURE 4